


## Heyco Crimp-less Sunbundler Installation Instructions

Parts are supplied with one end of the wire terminated and ready for use.

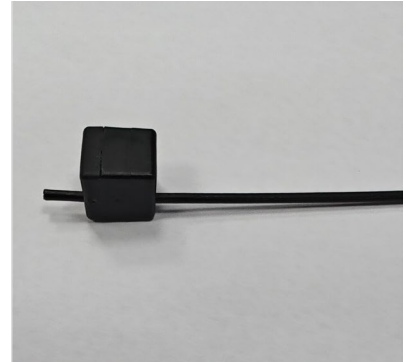

Loop loose end of the wire around your bundle, insert loose end into hole and pull tight.



To remove, cut one side and pull through or use Heyco removal tool (Heyco PN S6390) to remove one or both sides of the wire.



To reuse insert wire in either hole on the side of the part marked "INSERT" ensure a minimum .25" (6 mm) tail is present on the opposite side then pull back slightly to lock in place.

